

Structural Matrices in *MDOF* Systems

Giacomo Boffi

Dipartimento di Ingegneria Civile e Ambientale, Politecnico di Milano

May 12, 2015

Introductory Remarks

Structural Matrices

Orthogonality Relationships

Additional Orthogonality Relationships

Evaluation of Structural Matrices

Flexibility Matrix

Example

Stiffness Matrix

Mass Matrix

Damping Matrix

Geometric Stiffness

External Loading

Choice of Property Formulation

Static Condensation

Example

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Today we will study the properties of structural matrices, that is the operators that relate the vector of system coordinates \mathbf{x} and its time derivatives $\dot{\mathbf{x}}$ and $\ddot{\mathbf{x}}$ to the forces acting on the system nodes, \mathbf{f}_S , \mathbf{f}_D and \mathbf{f}_I , respectively.

Today we will study the properties of structural matrices, that is the operators that relate the vector of system coordinates \mathbf{x} and its time derivatives $\dot{\mathbf{x}}$ and $\ddot{\mathbf{x}}$ to the forces acting on the system nodes, \mathbf{f}_S , \mathbf{f}_D and \mathbf{f}_I , respectively.

In the end, we will see again the solution of a *MDOF* problem by superposition, and in general today we will revisit many of the subjects of our previous class, but you know

Today we will study the properties of structural matrices, that is the operators that relate the vector of system coordinates \mathbf{x} and its time derivatives $\dot{\mathbf{x}}$ and $\ddot{\mathbf{x}}$ to the forces acting on the system nodes, \mathbf{f}_S , \mathbf{f}_D and \mathbf{f}_I , respectively.

In the end, we will see again the solution of a *MDOF* problem by superposition, and in general today we will revisit many of the subjects of our previous class, but you know that a bit of reiteration is really good for developing minds.

We already met the mass and the stiffness matrix, \mathbf{M} and \mathbf{K} , and tangentially we introduced also the damping matrix \mathbf{C} . We have seen that these matrices express the linear relation that holds between the vector of system coordinates \mathbf{x} and its time derivatives $\dot{\mathbf{x}}$ and $\ddot{\mathbf{x}}$ to the forces acting on the system nodes, \mathbf{f}_S , \mathbf{f}_D and \mathbf{f}_I , elastic, damping and inertial force vectors.

$$\mathbf{M}\ddot{\mathbf{x}} + \mathbf{C}\dot{\mathbf{x}} + \mathbf{K}\mathbf{x} = \mathbf{p}(t)$$
$$\mathbf{f}_I + \mathbf{f}_D + \mathbf{f}_S = \mathbf{p}(t)$$

Also, we know that \mathbf{M} and \mathbf{K} are symmetric and definite positive, and that it is possible to uncouple the equation of motion expressing the system coordinates in terms of the *eigenvectors*, $\mathbf{x}(t) = \sum q_i \boldsymbol{\psi}_i$, where the q_i are the *modal coordinates* and the eigenvectors $\boldsymbol{\psi}_i$ are the non-trivial solutions to the equation of free vibrations,

$$(\mathbf{K} - \omega^2 \mathbf{M}) \boldsymbol{\psi} = \mathbf{0}$$

From the homogeneous, undamped problem

$$\mathbf{M}\ddot{\mathbf{x}} + \mathbf{K}\mathbf{x} = \mathbf{0}$$

introducing separation of variables

$$\mathbf{x}(t) = \boldsymbol{\psi} (A \sin \omega t + B \cos \omega t)$$

we wrote the homogeneous linear system

$$(\mathbf{K} - \omega^2 \mathbf{M}) \boldsymbol{\psi} = \mathbf{0}$$

whose non-trivial solutions $\boldsymbol{\psi}_i$ for ω_i^2 such that $\|\mathbf{K} - \omega_i^2 \mathbf{M}\| = 0$ are the eigenvectors.

It was demonstrated that, for each pair of distinct *eigenvalues* ω_r^2 and ω_s^2 , the corresponding eigenvectors obey the orthogonality condition,

$$\boldsymbol{\psi}_s^T \mathbf{M} \boldsymbol{\psi}_r = \delta_{rs} M_r, \quad \boldsymbol{\psi}_s^T \mathbf{K} \boldsymbol{\psi}_r = \delta_{rs} \omega_r^2 M_r.$$

From

$$\mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \mathbf{M} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \boldsymbol{\psi}_s$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships
Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \mathbf{M} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} \omega_r^4 M_r,$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships
Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \mathbf{M} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} \omega_r^4 M_r,$$

premultiplying the first equation by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \mathbf{M}^{-1}$

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s =$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships
Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Additional Orthogonality Relationships

Structural
Matrices

Giacomo Boffi

From

$$\mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \mathbf{M} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} \omega_r^4 M_r,$$

premultiplying the first equation by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \mathbf{M}^{-1}$

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} \omega_r^6 M_r$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships
Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \mathbf{M} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} \omega_r^4 M_r,$$

premultiplying the first equation by $\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \mathbf{M}^{-1}$

$$\boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \omega_s^2 \boldsymbol{\psi}_r^T \mathbf{K} \mathbf{M}^{-1} \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} \omega_r^6 M_r$$

and, generalizing,

$$\boldsymbol{\psi}_r^T (\mathbf{K} \mathbf{M}^{-1})^b \mathbf{K} \boldsymbol{\psi}_s = \delta_{rs} (\omega_r^2)^{b+1} M_r.$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships
Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \mathbf{K} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \boldsymbol{\psi}_s =$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships

Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \mathbf{K} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^2}$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships

Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \mathbf{K} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^2}$$

premultiplying the first eq. by $\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^2$ we have

$$\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^2 \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s =$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships

Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \mathbf{K} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^2}$$

premultiplying the first eq. by $\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^2$ we have

$$\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^2 \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^4}$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships

Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

From

$$\mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \mathbf{K} \boldsymbol{\psi}_s$$

premultiplying by $\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1}$ we have

$$\boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^2}$$

premultiplying the first eq. by $\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^2$ we have

$$\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^2 \mathbf{M} \boldsymbol{\psi}_s = \omega_s^{-2} \boldsymbol{\psi}_r^T \mathbf{M} \mathbf{K}^{-1} \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^4}$$

and, generalizing,

$$\boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^b \mathbf{M} \boldsymbol{\psi}_s = \delta_{rs} \frac{M_s}{\omega_s^{2b}}$$

Introductory
Remarks

Structural
Matrices

Orthogonality Relationships

Additional Orthogonality
Relationships

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Additional Relationships, 3

Defining $X_{rs}(k) = \boldsymbol{\psi}_r^T \mathbf{M} (\mathbf{M}^{-1} \mathbf{K})^k \boldsymbol{\psi}_s$ we have

$$\begin{cases} X_{rs}(0) = \boldsymbol{\psi}_r^T \mathbf{M} \boldsymbol{\psi}_s & = \delta_{rs} (\omega_s^2)^0 M_s \\ X_{rs}(1) = \boldsymbol{\psi}_r^T \mathbf{K} \boldsymbol{\psi}_s & = \delta_{rs} (\omega_s^2)^1 M_s \\ X_{rs}(2) = \boldsymbol{\psi}_r^T (\mathbf{K} \mathbf{M}^{-1})^1 \mathbf{K} \boldsymbol{\psi}_s & = \delta_{rs} (\omega_s^2)^2 M_s \\ \dots & \\ X_{rs}(n) = \boldsymbol{\psi}_r^T (\mathbf{K} \mathbf{M}^{-1})^{n-1} \mathbf{K} \boldsymbol{\psi}_s & = \delta_{rs} (\omega_s^2)^n M_s \end{cases}$$

Observing that $(\mathbf{M}^{-1} \mathbf{K})^{-1} = (\mathbf{K}^{-1} \mathbf{M})^1$

$$\begin{cases} X_{rs}(-1) = \boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^1 \mathbf{M} \boldsymbol{\psi}_s & = \delta_{rs} (\omega_s^2)^{-1} M_s \\ \dots & \\ X_{rs}(-n) = \boldsymbol{\psi}_r^T (\mathbf{M} \mathbf{K}^{-1})^n \mathbf{M} \boldsymbol{\psi}_s & = \delta_{rs} (\omega_s^2)^{-n} M_s \end{cases}$$

finally

$$X_{rs}(k) = \delta_{rs} \omega_s^{2k} M_s \quad \text{for } k = -\infty, \dots, \infty.$$

Given a system whose state is determined by the generalized displacements x_j of a set of nodes, we define the flexibility f_{jk} as the deflection, in direction of x_j , due to the application of a unit force in correspondance of the displacement x_k . The matrix $\mathbf{F} = [f_{jk}]$ is the *flexibility matrix*.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Given a system whose state is determined by the generalized displacements x_j of a set of nodes, we define the flexibility f_{jk} as the deflection, in direction of x_j , due to the application of a unit force in correspondance of the displacement x_k . The matrix $\mathbf{F} = [f_{jk}]$ is the *flexibility matrix*.

In our context, the degrees of freedom are associated with external loads and/or inertial forces.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Given a system whose state is determined by the generalized displacements x_j of a set of nodes, we define the flexibility f_{jk} as the deflection, in direction of x_j , due to the application of a unit force in correspondance of the displacement x_k . The matrix $\mathbf{F} = [f_{jk}]$ is the *flexibility matrix*.

In our context, the degrees of freedom are associated with external loads and/or inertial forces.

Given a load vector $\mathbf{p} = \{p_k\}$ (of course the load components act in correspondance of the degrees of freedom), the individual displacement x_j is


$$x_j = \sum f_{jk} p_k$$

or, in vector notation,


$$\mathbf{x} = \mathbf{F} \mathbf{p}$$

[Introductory Remarks](#)[Structural Matrices](#)[Evaluation of Structural Matrices](#)[Flexibility Matrix](#)[Example](#)[Stiffness Matrix](#)[Strain Energy](#)[Symmetry](#)[Direct Assemblage](#)[Example](#)[Mass Matrix](#)[Consistent Mass Matrix](#)[Discussion](#)[Damping Matrix](#)[Example](#)[Geometric Stiffness](#)[External Loading](#)[Choice of Property Formulation](#)


Example




The dynamical system



The degrees of freedom

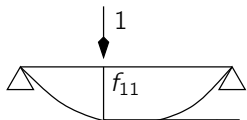

Displacements due to $p_1 = 1$

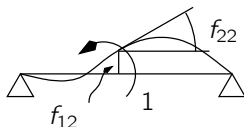

and due to $p_2 = 1$.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Each node shall be in equilibrium under the action of the external forces and the elastic forces, hence taking into accounts all the nodes, all the external forces and all the elastic forces it is possible to write the vector equation of equilibrium

$$\mathbf{p} = \mathbf{f}_S$$

and, substituting in the previous vector expression of the displacements

$$\mathbf{x} = \mathbf{F} \mathbf{f}_S$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Each node shall be in equilibrium under the action of the external forces and the elastic forces, hence taking into accounts all the nodes, all the external forces and all the elastic forces it is possible to write the vector equation of equilibrium

$$\mathbf{p} = \mathbf{f}_S$$

and, substituting in the previous vector expression of the displacements

$$\mathbf{x} = \mathbf{F} \mathbf{f}_S$$

Pre-multiplying by \mathbf{F}^{-1} ,

$$\mathbf{F}^{-1} \mathbf{x} = \mathbf{F}^{-1} \mathbf{F} \mathbf{f}_S = \mathbf{f}_S.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The *stiffness matrix* \mathbf{K} can be simply defined as the inverse of the flexibility matrix \mathbf{F} ,

$$\mathbf{K} = \mathbf{F}^{-1}.$$

Alternatively the single coefficient k_{ij} can be defined as the external force (equal and opposite to the corresponding elastic force) applied to the *DOF* number i that gives place to a displacement vector $\mathbf{x}^{(j)} = \{x_n\} = \{\delta_{nj}\}$, where all the components are equal to zero, except for $x_j^{(j)} = 1$.

$$\sum_n f_{in} k_{nj} = \mathbf{F} \mathbf{k}_j = \delta_{ij}$$

where \mathbf{k}_s is the vector containing the coefficients k_{rs} .

Introductory
RemarksStructural
MatricesEvaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Collecting all the $\mathbf{x}^{(j)}$ in a matrix \mathbf{X} , it is $\mathbf{X} = \mathbf{I}$ and we have, writing all the equations at once,

$$\mathbf{X} = \mathbf{I} = \mathbf{F} [k_{ij}], \Rightarrow [k_{ij}] = \mathbf{K} = \mathbf{F}^{-1}.$$

Finally,

$$\mathbf{p} = \mathbf{f}_S = \mathbf{K} \mathbf{x}.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The elastic strain energy V can be written in terms of displacements and external forces,

$$V = \frac{1}{2} \mathbf{p}^T \mathbf{x} = \frac{1}{2} \left\{ \begin{array}{l} \mathbf{p}^T \mathbf{F} \mathbf{p}, \\ \mathbf{x} \\ \mathbf{x}^T \mathbf{K} \mathbf{x}, \\ \mathbf{p}^T \end{array} \right.$$

Because the elastic strain energy of a stable system is always greater than zero, \mathbf{K} is a positive definite matrix.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The elastic strain energy V can be written in terms of displacements and external forces,

$$V = \frac{1}{2} \mathbf{p}^T \mathbf{x} = \frac{1}{2} \left\{ \begin{array}{l} \mathbf{p}^T \underbrace{\mathbf{F} \mathbf{p}}_{\mathbf{x}}, \\ \underbrace{\mathbf{x}^T \mathbf{K} \mathbf{x}}_{\mathbf{p}^T}. \end{array} \right.$$

Because the elastic strain energy of a stable system is always greater than zero, \mathbf{K} is a positive definite matrix. On the other hand, for an unstable system, think of a compressed beam, there are displacement patterns that are associated to zero strain energy.

Introductory
RemarksStructural
MatricesEvaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

When two sets of loads, \mathbf{p}^A and \mathbf{p}^B , are applied one after the other to an elastic system; the work done is

$$V_{AB} = \frac{1}{2}\mathbf{p}^{AT}\mathbf{x}^A + \mathbf{p}^{AT}\mathbf{x}^B + \frac{1}{2}\mathbf{p}^{BT}\mathbf{x}^B.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

When two sets of loads, \mathbf{p}^A and \mathbf{p}^B , are applied one after the other to an elastic system; the work done is

$$V_{AB} = \frac{1}{2}\mathbf{p}^{AT}\mathbf{x}^A + \mathbf{p}^{AT}\mathbf{x}^B + \frac{1}{2}\mathbf{p}^{BT}\mathbf{x}^B.$$

If we revert the order of application the work is

$$V_{BA} = \frac{1}{2}\mathbf{p}^{BT}\mathbf{x}^B + \mathbf{p}^{BT}\mathbf{x}^A + \frac{1}{2}\mathbf{p}^{AT}\mathbf{x}^A.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

When two sets of loads, \mathbf{p}^A and \mathbf{p}^B , are applied one after the other to an elastic system; the work done is

$$V_{AB} = \frac{1}{2}\mathbf{p}^{AT}\mathbf{x}^A + \mathbf{p}^{AT}\mathbf{x}^B + \frac{1}{2}\mathbf{p}^{BT}\mathbf{x}^B.$$

If we revert the order of application the work is

$$V_{BA} = \frac{1}{2}\mathbf{p}^{BT}\mathbf{x}^B + \mathbf{p}^{BT}\mathbf{x}^A + \frac{1}{2}\mathbf{p}^{AT}\mathbf{x}^A.$$

The total work being independent of the order of loading,

$$\mathbf{p}^{AT}\mathbf{x}^B = \mathbf{p}^{BT}\mathbf{x}^A.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Expressing the displacements in terms of \mathbf{F} ,

$$\mathbf{p}^{AT} \mathbf{F} \mathbf{p}^B = \mathbf{p}^{BT} \mathbf{F} \mathbf{p}^A,$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Expressing the displacements in terms of \mathbf{F} ,

$$\mathbf{p}^{AT} \mathbf{F} \mathbf{p}^B = \mathbf{p}^{BT} \mathbf{F} \mathbf{p}^A,$$

both terms are scalars so we can write

$$\mathbf{p}^{AT} \mathbf{F} \mathbf{p}^B = \left(\mathbf{p}^{BT} \mathbf{F} \mathbf{p}^A \right)^T = \mathbf{p}^{AT} \mathbf{F}^T \mathbf{p}^B.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Expressing the displacements in terms of \mathbf{F} ,

$$\mathbf{p}^{AT} \mathbf{F} \mathbf{p}^B = \mathbf{p}^{BT} \mathbf{F} \mathbf{p}^A,$$

both terms are scalars so we can write

$$\mathbf{p}^{AT} \mathbf{F} \mathbf{p}^B = \left(\mathbf{p}^{BT} \mathbf{F} \mathbf{p}^A \right)^T = \mathbf{p}^{AT} \mathbf{F}^T \mathbf{p}^B.$$

Because this equation holds for every \mathbf{p} , we conclude that

$$\mathbf{F} = \mathbf{F}^T,$$

and, as the inverse of a symmetric matrix is symmetric,

$$\mathbf{K} = \mathbf{K}^T.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

A practical consideration

For the kind of *structures* we mostly deal with in our examples, problems, exercises and assignments, that is *simple structures*, it is usually convenient to compute the flexibility matrix applying the Principle of Virtual Displacements (we have seen an example last week) and inverting the flexibility to obtain the stiffness matrix,

$$\mathbf{K} = \mathbf{F}^{-1}$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

For the kind of *structures* we mostly deal with in our examples, problems, exercises and assignments, that is *simple structures*, it is usually convenient to compute the flexibility matrix applying the Principle of Virtual Displacements (we have seen an example last week) and inverting the flexibility to obtain the stiffness matrix,

$$\mathbf{K} = \mathbf{F}^{-1}$$

.
For general structures, large and/or complex, the PVD approach cannot work in practice, as the number of degrees of freedom necessary to model the structural behaviour exceed our ability to do pencil and paper computations...

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

For the kind of *structures* we mostly deal with in our examples, problems, exercises and assignments, that is *simple structures*, it is usually convenient to compute the flexibility matrix applying the Principle of Virtual Displacements (we have seen an example last week) and inverting the flexibility to obtain the stiffness matrix,

$$\mathbf{K} = \mathbf{F}^{-1}$$

For general structures, large and/or complex, the PVD approach cannot work in practice, as the number of degrees of freedom necessary to model the structural behaviour exceed our ability to do pencil and paper computations... Different methods are required to construct the stiffness matrix for such large, complex structures.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly
- ▶ the *element stiffness matrix*, \mathbf{K}_{el} establishes a linear relation between an element nodal displacements and forces,

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly
- ▶ the *element stiffness matrix*, \mathbf{K}_{el} establishes a linear relation between an element nodal displacements and forces,
- ▶ the state of the structure can be described in terms of a vector \mathbf{x} of generalized *nodal displacements*,

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly
- ▶ the *element stiffness matrix*, \mathbf{K}_{el} establishes a linear relation between an element nodal displacements and forces,
- ▶ the state of the structure can be described in terms of a vector \mathbf{x} of generalized *nodal displacements*,
- ▶ there is a mapping between element and structure *DOF*'s, $i_{el} \mapsto r$,

Introductory
RemarksStructural
MatricesEvaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly
- ▶ the *element stiffness matrix*, \mathbf{K}_{el} establishes a linear relation between an element nodal displacements and forces,
- ▶ the state of the structure can be described in terms of a vector \mathbf{x} of generalized *nodal displacements*,
- ▶ there is a mapping between element and structure *DOF*'s, $i_{el} \mapsto r$,
- ▶ for each *FE*, all local k_{ij} 's are contributed to the global stiffness k_{rs} 's, with $i \mapsto r$ and $j \mapsto s$, taking in due consideration differences between local and global systems of reference.

Introductory
RemarksStructural
MatricesEvaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly
- ▶ the *element stiffness matrix*, \mathbf{K}_{el} establishes a linear relation between an element nodal displacements and forces,
- ▶ the state of the structure can be described in terms of a vector \mathbf{x} of generalized *nodal displacements*,
- ▶ there is a mapping between element and structure *DOF*'s, $i_{el} \mapsto r$,
- ▶ for each *FE*, all local k_{ij} 's are contributed to the global stiffness k_{rs} 's, with $i \mapsto r$ and $j \mapsto s$, taking in due consideration differences between local and global systems of reference.

Introductory
RemarksStructural
MatricesEvaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The most common procedure to construct the matrices that describe the behaviour of a complex system is the *Finite Element Method*, or *FEM*. The procedure can be sketched in the following terms:

- ▶ the structure is subdivided in non-overlapping portions, the *finite elements*, bounded by *nodes*, connected by the same nodes,
- ▶ the displacements, strains, stresses in the *fe* are described in terms of a linear combination of shape functions, weighted in according to the nodal displacements, element matrices are computed accordingly
- ▶ the *element stiffness matrix*, \mathbf{K}_{el} establishes a linear relation between an element nodal displacements and forces,
- ▶ the state of the structure can be described in terms of a vector \mathbf{x} of generalized *nodal displacements*,
- ▶ there is a mapping between element and structure *DOF*'s, $i_{el} \mapsto r$,
- ▶ for each *FE*, all local k_{ij} 's are contributed to the global stiffness k_{rs} 's, with $i \mapsto r$ and $j \mapsto s$, taking in due consideration differences between local and global systems of reference.

Note that in the r -th *global* equation of equilibrium we have internal forces caused by the nodal displacements of the *FE* that have nodes i_{el} such that $i_{el} \mapsto r$, thus implying that global \mathbf{K} is a *banded* matrix.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Consider a 2-D inextensible beam element, that has 4 *DOF*, namely two transverse end displacements x_1 , x_2 and two end rotations, x_3 , x_4 . The element stiffness is computed using 4 shape functions ϕ_i , the transverse displacement being $v(s) = \sum_i \phi_i(s)x_i$, the different ϕ_i are such all end displacements or rotation are zero, except the one corresponding to index i .

The shape functions for a beam are

$$\begin{aligned}\phi_1(s) &= 1 - 3\left(\frac{s}{L}\right)^2 + 2\left(\frac{s}{L}\right)^3, & \phi_2(s) &= 3\left(\frac{s}{L}\right)^2 - 2\left(\frac{s}{L}\right)^3, \\ \phi_3(s) &= s\left(1 - \left(\frac{s}{L}\right)^2\right), & \phi_4(s) &= s\left(\left(\frac{s}{L}\right)^2 - \left(\frac{s}{L}\right)\right).\end{aligned}$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Example, 2

The element stiffness coefficients can be computed using, what else, the PVD: we compute the external virtual work done by a variation δx_i by the force due to a unit displacement x_j , that is k_{ij} ,

$$\delta W_{\text{ext}} = \delta x_i k_{ij},$$

the virtual internal work is the work done by the variation of the curvature, $\delta x_i \phi_i''(s)$ by the bending moment associated with a unit x_j , $\phi_j''(s)EJ(s)$,

$$\delta W_{\text{int}} = \int_0^L \delta x_i \phi_i''(s) \phi_j''(s) EJ(s) ds.$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Example, 3

The equilibrium condition is the equivalence of the internal and external virtual works, so that simplifying δx_i we have

$$k_{ij} = \int_0^L \phi_i''(s)\phi_j''(s)EJ(s) ds.$$

For $EJ = \text{const}$,

$$\mathbf{f}_S = \frac{EJ}{L^3} \begin{bmatrix} 12 & -12 & 6L & 6L \\ -12 & 12 & -6L & -6L \\ 6L & -6L & 4L^2 & 2L^2 \\ 6L & -6L & 2L^2 & 4L^2 \end{bmatrix} \mathbf{x}$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix


Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Blackboard Time!

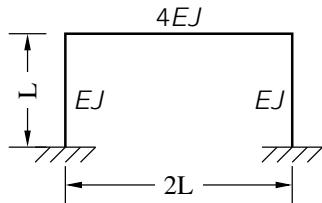

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The mass matrix maps the nodal accelerations to nodal inertial forces, and the most common assumption is to concentrate all masses in nodal point masses, without rotational inertia, computed *lumping* a fraction of each element mass (or a fraction of the supported mass) on all its bounding nodes.

This procedure leads to a so called *lumped* mass matrix, a diagonal matrix with diagonal elements greater than zero for all the translational degrees of freedom, and diagonal elements equal to zero for angular degrees of freedom.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

The mass matrix is definite positive *only* if all the structure *DOF*'s are translational degrees of freedom, otherwise \mathbf{M} is semi-definite positive and the eigenvalue procedure is not directly applicable. This problem can be overcome either by using a *consistent* mass matrix or using the *static condensation* procedure.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Consistent Mass Matrix

A consistent mass matrix is built using the rigorous *FEM* procedure, computing the nodal reactions that equilibrate the distributed inertial forces that develop in the element due to a linear combination of inertial forces.

Using our beam example as a reference, consider the inertial forces associated with a single nodal acceleration \ddot{x}_j , $f_{i,j}(s) = m(s)\phi_j(s)\ddot{x}_j$ and denote with $m_{ij}\ddot{x}_j$ the reaction associated with the i -nth degree of freedom of the element, by the PVD

$$\delta x_i m_{ij} \ddot{x}_j = \int \delta x_i \phi_i(s) m(s) \phi_j(s) ds \ddot{x}_j$$

simplifying

$$m_{ij} = \int m(s) \phi_i(s) \phi_j(s) ds.$$

For $m(s) = \bar{m} = \text{const.}$

$$\mathbf{f}_i = \frac{\bar{m}L}{420} \begin{bmatrix} 156 & 54 & 22L & -13L \\ 54 & 156 & 13L & -22L \\ 22L & 13L & 4L^2 & -3L^2 \\ -13L & -22L & -3L^2 & 4L^2 \end{bmatrix} \ddot{\mathbf{x}}$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Pro

- ▶ some convergence theorem of *FEM* theory holds only if the mass matrix is consistent,
- ▶ slightly more accurate results,
- ▶ no need for static condensation.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Pro

- ▶ some convergence theorem of *FEM* theory holds only if the mass matrix is consistent,
- ▶ slightly more accurate results,
- ▶ no need for static condensation.

Contra

- ▶ \mathbf{M} is no more diagonal, heavy computational aggravation,
- ▶ static condensation is computationally beneficial, inasmuch it *reduces* the global number of degrees of freedom.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

For each element $c_{ij} = \int c(s)\phi_i(s)\phi_j(s) ds$ and the damping matrix \mathbf{C} can be assembled from element contributions.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

For each element $c_{ij} = \int c(s)\phi_i(s)\phi_j(s) ds$ and the damping matrix \mathbf{C} can be assembled from element contributions. However, using the FEM $\mathbf{C}^* = \mathbf{\Psi}^T \mathbf{C} \mathbf{\Psi}$ is not diagonal and hence the modal equations are no more uncoupled!

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

For each element $c_{ij} = \int c(s)\phi_i(s)\phi_j(s) ds$ and the damping matrix \mathbf{C} can be assembled from element contributions.

However, using the FEM $\mathbf{C}^* = \mathbf{\Psi}^T \mathbf{C} \mathbf{\Psi}$ is not diagonal and hence the modal equations are no more uncoupled!

The alternative is to write directly the global damping matrix, in terms of the underdetermined coefficients \mathbf{c}_b and the infinite sequence of orthogonal matrices we described previously:

$$\mathbf{C} = \sum_b \mathbf{c}_b \mathbf{M} (\mathbf{M}^{-1} \mathbf{K})^b .$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

With our definition of \mathbf{C} ,

$$\mathbf{C} = \sum_b c_b \mathbf{M} (\mathbf{M}^{-1} \mathbf{K})^b,$$

assuming normalized eigenvectors, we can write the individual component of $\mathbf{C}^* = \boldsymbol{\Psi}^T \mathbf{C} \boldsymbol{\Psi}$

$$c_{ij}^* = \boldsymbol{\psi}_i^T \mathbf{C} \boldsymbol{\psi}_j = \delta_{ij} \sum_b c_b \omega_j^{2b}$$

due to the additional orthogonality relations, we recognize that now \mathbf{C}^* is a diagonal matrix.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

With our definition of \mathbf{C} ,

$$\mathbf{C} = \sum_b \mathbf{c}_b \mathbf{M} (\mathbf{M}^{-1} \mathbf{K})^b,$$

assuming normalized eigenvectors, we can write the individual component of $\mathbf{C}^* = \boldsymbol{\Psi}^T \mathbf{C} \boldsymbol{\Psi}$

$$c_{ij}^* = \boldsymbol{\psi}_i^T \mathbf{C} \boldsymbol{\psi}_j = \delta_{ij} \sum_b \mathbf{c}_b \omega_j^{2b}$$

due to the additional orthogonality relations, we recognize that now \mathbf{C}^* is a diagonal matrix.

Introducing the modal damping C_j we have

$$C_j = \boldsymbol{\psi}_j^T \mathbf{C} \boldsymbol{\psi}_j = \sum_b \mathbf{c}_b \omega_j^{2b} = 2\zeta_j \omega_j$$

and we can write a system of linear equations in the \mathbf{c}_b .

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Example

We want a fixed, 5% damping ratio for the first three modes, taking note that the modal equation of motion is

$$\ddot{q}_i + 2\zeta_i\omega_i\dot{q}_i + \omega_i^2q_i = p_i^*$$

Using

$$\mathbf{C} = \mathbf{c}_0\mathbf{M} + \mathbf{c}_1\mathbf{K} + \mathbf{c}_2\mathbf{K}\mathbf{M}^{-1}\mathbf{K}$$

we have


$$2 \times 0.05 \begin{Bmatrix} \omega_1 \\ \omega_2 \\ \omega_3 \end{Bmatrix} = \begin{bmatrix} 1 & \omega_1^2 & \omega_1^4 \\ 1 & \omega_2^2 & \omega_2^4 \\ 1 & \omega_3^2 & \omega_3^4 \end{bmatrix} \begin{Bmatrix} \mathbf{c}_0 \\ \mathbf{c}_1 \\ \mathbf{c}_2 \end{Bmatrix}$$

Solving for the \mathbf{c} 's and substituting above, the resulting damping matrix is orthogonal to every eigenvector of the system, for the first three modes, leads to a modal damping ratio that is equal to 5%.

Example

Computing the coefficients c_0 , c_1 and c_2 to have a 5% damping at frequencies $\omega_1 = 2$, $\omega_2 = 5$ and $\omega_3 = 8$ we have $c_0 = 1200/9100$, $c_1 = 159/9100$ and $c_2 = -1/9100$.

Writing $\zeta(\omega) = \frac{1}{2} \left(\frac{c_0}{\omega} + c_1\omega + c_2\omega^3 \right)$ we can plot the above function, along with its two term equivalent ($c_0 = 10/70$, $c_1 = 1/70$).

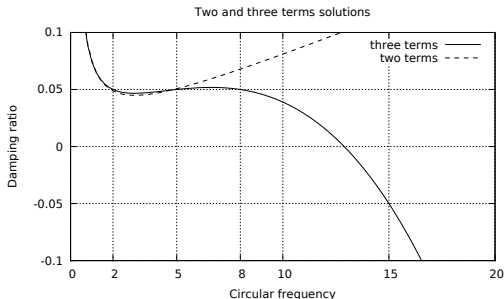

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness


External Loading

Choice of Property
Formulation

Example

Computing the coefficients c_0 , c_1 and c_2 to have a 5% damping at frequencies $\omega_1 = 2$, $\omega_2 = 5$ and $\omega_3 = 8$ we have $c_0 = 1200/9100$, $c_1 = 159/9100$ and $c_2 = -1/9100$.

Writing $\zeta(\omega) = \frac{1}{2} \left(\frac{c_0}{\omega} + c_1\omega + c_2\omega^3 \right)$ we can plot the above function, along with its two term equivalent ($c_0 = 10/70$, $c_1 = 1/70$).

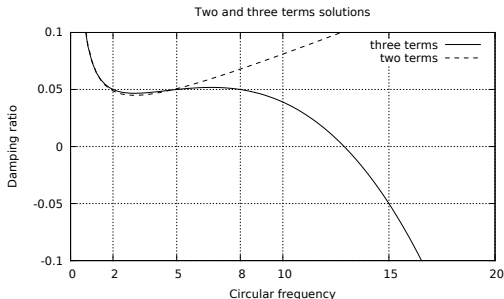

Negative damping? No, thank you: use only an even number of terms.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness


External Loading

Choice of Property
Formulation

Geometric Stiffness

A common assumption is based on a linear approximation, for a beam element

$$\mathbf{f}_G = \frac{N}{L} \begin{bmatrix} +1 & -1 & 0 & 0 \\ -1 & +1 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} \mathbf{x}$$

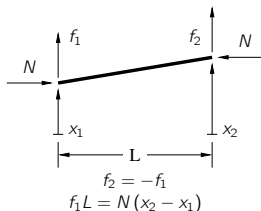

It is possible to compute the geometrical stiffness matrix using *FEM*, shape functions and PVD,

$$k_{G,ij} = \int N(s)\phi'_i(s)\phi'_j(s) ds,$$

for constant N

$$\mathbf{K}_G = \frac{N}{30L} \begin{bmatrix} 36 & -36 & 3L & 3L \\ -36 & 36 & -3L & -3L \\ 3L & -3L & 4L^2 & -L^2 \\ 3L & -3L & -L^2 & 4L^2 \end{bmatrix}$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assembly

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Following the same line of reasoning that we applied to find nodal inertial forces, by the PVD and the use of shape functions we have

$$p_i(t) = \int p(s, t)\phi_i(s) ds.$$

For a constant, uniform load $p(s, t) = \bar{p} = \text{const}$, applied on a beam element,

$$\mathbf{p} = \bar{p}L \left\{ \frac{1}{2} \quad \frac{1}{2} \quad \frac{L}{12} \quad -\frac{L}{12} \right\}^T$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Flexibility Matrix

Example

Stiffness Matrix

Strain Energy

Symmetry

Direct Assemblage

Example

Mass Matrix

Consistent Mass Matrix

Discussion

Damping Matrix

Example

Geometric Stiffness

External Loading

Choice of Property
Formulation

Choice of Property Formulation

Structural
Matrices

Giacomo Boffi

Simplified Approach

Some structural parameter is approximated, only translational *DOF*s are retained in dynamic analysis.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Static Condensation

Example

Simplified Approach

Some structural parameter is approximated, only translational *DOF*'s are retained in dynamic analysis.

Consistent Approach

All structural parameters are computed according to the *FEM*, and all *DOF*'s are retained in dynamic analysis.

Simplified Approach

Some structural parameter is approximated, only translational *DOF*'s are retained in dynamic analysis.

Consistent Approach

All structural parameters are computed according to the *FEM*, and all *DOF*'s are retained in dynamic analysis.

If we choose a simplified approach, we must use a procedure to remove unneeded structural *DOF*'s from the model that we use for the dynamic analysis.

Simplified Approach

Some structural parameter is approximated, only translational *DOF*'s are retained in dynamic analysis.

Consistent Approach

All structural parameters are computed according to the *FEM*, and all *DOF*'s are retained in dynamic analysis.

If we choose a simplified approach, we must use a procedure to remove unneeded structural *DOF*'s from the model that we use for the dynamic analysis.
Enter the *Static Condensation Method*.

We have, from a *FEM* analysis, a stiffness matrix that uses all nodal *DOF*'s, and from the lumped mass procedure a mass matrix where only translational (and maybe a few rotational) *DOF*'s are blessed with a non zero diagonal term.

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Static Condensation

Example

We have, from a *FEM* analysis, a stiffness matrix that uses all nodal *DOF*'s, and from the lumped mass procedure a mass matrix were only translational (and maybe a few rotational) *DOF*'s are blessed with a non zero diagonal term.

In this case, we can always rearrange and partition the displacement vector \mathbf{x} in two subvectors:

- \mathbf{x}_A all the *DOF*'s that are associated with inertial forces and
- \mathbf{x}_B all the remaining *DOF*'s not associated with inertial forces.

$$\mathbf{x} = \begin{Bmatrix} \mathbf{x}_A \\ \mathbf{x}_B \end{Bmatrix}$$

After rearranging the *DOF*'s, we must rearrange also the rows (equations) and the columns (force contributions) in the structural matrices, and eventually partition the matrices so that

$$\begin{Bmatrix} \mathbf{f}_I \\ \mathbf{0} \end{Bmatrix} = \begin{bmatrix} \mathbf{M}_{AA} & \mathbf{M}_{AB} \\ \mathbf{M}_{BA} & \mathbf{M}_{BB} \end{bmatrix} \begin{Bmatrix} \ddot{\mathbf{x}}_A \\ \ddot{\mathbf{x}}_B \end{Bmatrix}$$
$$\mathbf{f}_S = \begin{bmatrix} \mathbf{K}_{AA} & \mathbf{K}_{AB} \\ \mathbf{K}_{BA} & \mathbf{K}_{BB} \end{bmatrix} \begin{Bmatrix} \mathbf{x}_A \\ \mathbf{x}_B \end{Bmatrix}$$

with

$$\mathbf{M}_{BA} = \mathbf{M}_{AB}^T = \mathbf{0}, \quad \mathbf{M}_{BB} = \mathbf{0}, \quad \mathbf{K}_{BA} = \mathbf{K}_{AB}^T$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Static Condensation
Example

After rearranging the *DOF*'s, we must rearrange also the rows (equations) and the columns (force contributions) in the structural matrices, and eventually partition the matrices so that

$$\begin{Bmatrix} \mathbf{f}_I \\ \mathbf{0} \end{Bmatrix} = \begin{bmatrix} \mathbf{M}_{AA} & \mathbf{M}_{AB} \\ \mathbf{M}_{BA} & \mathbf{M}_{BB} \end{bmatrix} \begin{Bmatrix} \ddot{\mathbf{x}}_A \\ \ddot{\mathbf{x}}_B \end{Bmatrix}$$
$$\mathbf{f}_S = \begin{bmatrix} \mathbf{K}_{AA} & \mathbf{K}_{AB} \\ \mathbf{K}_{BA} & \mathbf{K}_{BB} \end{bmatrix} \begin{Bmatrix} \mathbf{x}_A \\ \mathbf{x}_B \end{Bmatrix}$$

with

$$\mathbf{M}_{BA} = \mathbf{M}_{AB}^T = \mathbf{0}, \quad \mathbf{M}_{BB} = \mathbf{0}, \quad \mathbf{K}_{BA} = \mathbf{K}_{AB}^T$$

Finally we rearrange the loadings vector and write...

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Static Condensation
Example

... the equation of dynamic equilibrium,

$$\mathbf{p}_A = \mathbf{M}_{AA}\ddot{\mathbf{x}}_A + \mathbf{M}_{AB}\ddot{\mathbf{x}}_B + \mathbf{K}_{AA}\mathbf{x}_A + \mathbf{K}_{AB}\mathbf{x}_B$$

$$\mathbf{p}_B = \mathbf{M}_{BA}\ddot{\mathbf{x}}_A + \mathbf{M}_{BB}\ddot{\mathbf{x}}_B + \mathbf{K}_{BA}\mathbf{x}_A + \mathbf{K}_{BB}\mathbf{x}_B$$

Introductory
Remarks

Structural
Matrices

Evaluation of
Structural
Matrices

Choice of Property
Formulation

Static Condensation

Example

... the equation of dynamic equilibrium,

$$\mathbf{p}_A = \mathbf{M}_{AA}\ddot{\mathbf{x}}_A + \mathbf{M}_{AB}\ddot{\mathbf{x}}_B + \mathbf{K}_{AA}\mathbf{x}_A + \mathbf{K}_{AB}\mathbf{x}_B$$

$$\mathbf{p}_B = \mathbf{M}_{BA}\ddot{\mathbf{x}}_A + \mathbf{M}_{BB}\ddot{\mathbf{x}}_B + \mathbf{K}_{BA}\mathbf{x}_A + \mathbf{K}_{BB}\mathbf{x}_B$$

The highlighted terms are zero vectors, so we can simplify

$$\mathbf{M}_{AA}\ddot{\mathbf{x}}_A + \mathbf{K}_{AA}\mathbf{x}_A + \mathbf{K}_{AB}\mathbf{x}_B = \mathbf{p}_A$$

$$\mathbf{K}_{BA}\mathbf{x}_A + \mathbf{K}_{BB}\mathbf{x}_B = \mathbf{p}_B$$

solving for \mathbf{x}_B in the 2nd equation and substituting

$$\mathbf{x}_B = \mathbf{K}_{BB}^{-1}\mathbf{p}_B - \mathbf{K}_{BB}^{-1}\mathbf{K}_{BA}\mathbf{x}_A$$

$$\mathbf{p}_A - \mathbf{K}_{AB}\mathbf{K}_{BB}^{-1}\mathbf{p}_B = \mathbf{M}_{AA}\ddot{\mathbf{x}}_A + (\mathbf{K}_{AA} - \mathbf{K}_{AB}\mathbf{K}_{BB}^{-1}\mathbf{K}_{BA})\mathbf{x}_A$$

... the equation of dynamic equilibrium,

$$\mathbf{p}_A = \mathbf{M}_{AA}\ddot{\mathbf{x}}_A + \mathbf{M}_{AB}\ddot{\mathbf{x}}_B + \mathbf{K}_{AA}\mathbf{x}_A + \mathbf{K}_{AB}\mathbf{x}_B$$

$$\mathbf{p}_B = \mathbf{M}_{BA}\ddot{\mathbf{x}}_A + \mathbf{M}_{BB}\ddot{\mathbf{x}}_B + \mathbf{K}_{BA}\mathbf{x}_A + \mathbf{K}_{BB}\mathbf{x}_B$$

The highlighted terms are zero vectors, so we can simplify

$$\mathbf{M}_{AA}\ddot{\mathbf{x}}_A + \mathbf{K}_{AA}\mathbf{x}_A + \mathbf{K}_{AB}\mathbf{x}_B = \mathbf{p}_A$$

$$\mathbf{K}_{BA}\mathbf{x}_A + \mathbf{K}_{BB}\mathbf{x}_B = \mathbf{p}_B$$

solving for \mathbf{x}_B in the 2nd equation and substituting

$$\mathbf{x}_B = \mathbf{K}_{BB}^{-1}\mathbf{p}_B - \mathbf{K}_{BB}^{-1}\mathbf{K}_{BA}\mathbf{x}_A$$

$$\mathbf{p}_A - \mathbf{K}_{AB}\mathbf{K}_{BB}^{-1}\mathbf{p}_B = \mathbf{M}_{AA}\ddot{\mathbf{x}}_A + (\mathbf{K}_{AA} - \mathbf{K}_{AB}\mathbf{K}_{BB}^{-1}\mathbf{K}_{BA})\mathbf{x}_A$$


Going back to the homogeneous problem, with obvious positions we can write

$$(\bar{\mathbf{K}} - \omega^2 \bar{\mathbf{M}}) \boldsymbol{\psi}_A = \mathbf{0}$$

but the $\boldsymbol{\psi}_A$ are only part of the structural eigenvectors, because in essentially every application we must consider also the other *DOF*'s, so we write

$$\boldsymbol{\psi}_i = \left\{ \begin{array}{l} \boldsymbol{\psi}_{A,i} \\ \boldsymbol{\psi}_{B,i} \end{array} \right\}, \text{ with } \boldsymbol{\psi}_{B,i} = \mathbf{K}_{BB}^{-1} \mathbf{K}_{BA} \boldsymbol{\psi}_{A,i}$$

Example

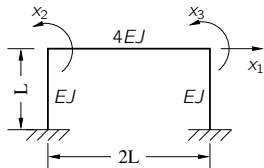

$$\mathbf{K} = \frac{2EJ}{L^3} \begin{bmatrix} 12 & 3L & 3L \\ 3L & 6L^2 & 2L^2 \\ 3L & 2L^2 & 6L^2 \end{bmatrix}$$

Introductory
Remarks

Structural
Matrices


Evaluation of
Structural
Matrices

Choice of Property
Formulation

Static Condensation

Example

Example

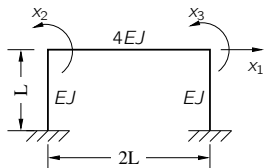

$$\mathbf{K} = \frac{2EJ}{L^3} \begin{bmatrix} 12 & 3L & 3L \\ 3L & 6L^2 & 2L^2 \\ 3L & 2L^2 & 6L^2 \end{bmatrix}$$

$$\mathbf{K}_{BB} = \frac{4EJ}{L} \begin{bmatrix} 3 & 1 \\ 1 & 3 \end{bmatrix}, \mathbf{K}_{BB}^{-1} = \frac{L}{32EJ} \begin{bmatrix} 3 & -1 \\ -1 & 3 \end{bmatrix},$$

$$\mathbf{K}_{AB} = \frac{6EJ}{L^2} \begin{bmatrix} 1 & 1 \end{bmatrix}, \mathbf{K}_{AB} \mathbf{K}_{BB}^{-1} \mathbf{K}_{AB}^T = \frac{6EJ}{L^2} \frac{L}{32EJ} \frac{6EJ}{L^2} \times 4 = \frac{9}{2} \frac{EJ}{L^3}$$

The matrix $\bar{\mathbf{K}}$ is

$$\bar{\mathbf{K}} = \mathbf{K}_{AA} - \mathbf{K}_{AB} \mathbf{K}_{BB}^{-1} \mathbf{K}_{AB}^T = \left(24 - \frac{9}{2}\right) \frac{EJ}{L^3} = \frac{39}{2} \frac{EJ}{L^3}$$

Introductory
RemarksStructural
MatricesEvaluation of
Structural
MatricesChoice of Property
Formulation

Static Condensation

Example