Giacomo Boffi

SDOF linear oscillator Response to Harmonic Loading

Giacomo Boffi

http://intranet.dica.polimi.it/people/boffi-giacomo

Dipartimento di Ingegneria Civile Ambientale e Territoriale Politecnico di Milano

March 1, 2018

Response of an Undamped Oscillator to Harmonic Load

The Equation of Motion of an Undamped Oscillator

The Particular Integral

Dynamic Amplification Response from Rest

Resonant Response

Response of a Damped Oscillator to Harmonic Load

The Equation of Motion for a Damped Oscillator

The Particular Integral

Stationary Response

The Angle of Phase

Dynamic Magnification

Exponential Load of Imaginary Argument

Measuring Acceleration and Displacement

The Accelerometre

Measuring Displacements

Vibration Isolation

Introduction
Force Isolation
Displacement Isolation
Isolation Effectiveness

Evaluation of damping

Introduction
Free vibration decay
Resonant amplification
Half Power
Resonance Energy Loss

SDOF linear oscillator

Giacomo Boffi

Undamped Response

Part I

Response of an Undamped Oscillator to Harmonic Load

The Equation of Motion

SDOF linear oscillator

Giacomo Boffi

Jndamped

EOM Undamped

The Particular Integral Dynamic Amplification

Response from Rest Resonant Response

The SDOF equation of motion for a harmonic loading is:

$$m\ddot{x} + kx = p_0 \sin \omega t$$
.

The solution can be written, using superposition, as the free vibration solution plus a particular solution, $\xi = \xi(t)$

$$x(t) = A\sin\omega_n t + B\cos\omega_n t + \xi(t)$$

where $\xi(t)$ satisfies the equation of motion,

$$m\ddot{\xi} + k\,\xi = p_0\sin\omega t.$$

The Equation of Motion

SDOF linear oscillator

Giacomo Boffi

EOM Undamped

The Particular Integral Dynamic Amplification Response from Rest Resonant Response

A particular solution can be written in terms of a harmonic function with the same circular frequency of the excitation, ω ,

$$\xi(t) = C \sin \omega t$$

whose second time derivative is

$$\ddot{\xi}(t) = -\omega^2 C \sin \omega t.$$

Substituting x and its derivative with ξ and simplifying the time dependency we get

$$C(k-\omega^2m)=p_0,$$

collecting k and introducing the frequency ratio $\beta = \omega/\omega_n$

$$C k(1 - \omega^2 m/k) = C k(1 - \omega^2/\omega_n^2) = C k(1 - \beta^2) = p_0.$$

SDOF linear oscillator

Giacomo Boffi

Undamped Response

The Particular Integral

Dynamic Amplification

Response from Rest Resonant Response

Starting from our last equation, $C(k-\omega^2 m)=C\,k\,(1-\beta^2)=p_0$, and solving for C we get $C=\frac{p_0}{k-\omega^2 m}=\frac{p_0}{k}\,\frac{1}{1-\beta^2}$.

SDOF linear oscillator

Giacomo Boffi

Undamped Response

Dynamic Amplification

EOM Undamped
The Particular Integral

Response from Rest

Starting from our last equation, $C(k - \omega^2 m) = C k (1 - \beta^2) = p_0$, and solving for C we get $C = \frac{p_0}{k - \omega^2 m} = \frac{p_0}{k} \frac{1}{1 - \beta^2}$.

We can now write the particular solution, with the dependencies on β singled out in the second factor:

$$\xi(t) = \frac{p_0}{k} \, \frac{1}{1 - \beta^2} \, \sin \omega t.$$

SDOF linear oscillator

Giacomo Boffi

Undamped Response EOM Undamped

The Particular Integral

Dynamic Amplification Response from Rest Response

0. 0. ...

Starting from our last equation, $C(k-\omega^2 m)=C\,k\,(1-\beta^2)=p_0$, and solving for C we get $C=\frac{p_0}{k-\omega^2 m}=\frac{p_0}{k}\,\frac{1}{1-\beta^2}$.

We can now write the particular solution, with the dependencies on β singled out in the second factor:

$$\xi(t) = \frac{p_0}{k} \, \frac{1}{1 - \beta^2} \, \sin \omega t.$$

The general integral for $p(t) = p_0 \sin \omega t$ is hence

$$x(t) = A\sin\omega_{n}t + B\cos\omega_{n}t + \frac{p_{0}}{k}\frac{1}{1-\beta^{2}}\sin\omega t.$$

Response Ratio and Dynamic Amplification Factor

SDOF linear oscillator

Giacomo Boffi

EOM Undamped The Particular Integral Dynamic Amplification

Introducing the static deformation, $\Delta_{\rm st} = p_0/k$, and the Response Ratio, $R(t; \beta)$ the particular integral is

$$\xi(t) = \Delta_{\mathsf{st}} \, R(t; \, \beta).$$

The Response Ratio is eventually expressed in terms of the dynamic amplification factor $D(\beta) = (1 - \beta^2)^{-1}$ as follows:

$$R(t; \beta) = \frac{1}{1 - \beta^2} \sin \omega t = D(\beta) \sin \omega t.$$

The dependency of D on β is examined in the next slide.

Response from Rest

Resonant Response

Dynamic Amplification Factor, the plot

SDOF linear oscillator


Giacomo Boffi

Response

EOM Undamped

The Particular Integral

Dynamic Amplification Response from Rest Response

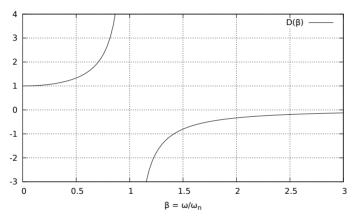

 $D(\beta)$ is stationary and almost equal to 1 when $\omega << \omega_{\rm n}$ (this is a quasi-static behaviour), it grows out of bound when $\beta \Rightarrow 1$ (resonance), it is negative for $\beta > 1$ and goes to 0 when $\omega >> \omega_{\rm n}$ (high-frequency loading).

Starting from rest conditions means that $x(0) = \dot{x}(0) = 0$.

SDOF linear oscillator

Giacomo Boffi

Undamped Response EOM Undamped

The Particular Integral Dynamic Amplification

Response from Rest Resonant Response

Starting from rest conditions means that $x(0) = \dot{x}(0) = 0$. Let's start with x(t), then evaluate x(0) and finally equate this last expression to 0:

$$x(t) = A \sin \omega_n t + B \cos \omega_n t + \Delta_{st} D(\beta) \sin \omega t,$$

$$x(0) = B = 0.$$

SDOF linear oscillator

Giacomo Boffi

Undamped
Response
EOM Undamped

The Particular Integral
Dynamic Amplification
Response from Rest
Response

SDOF linear oscillator Giacomo Boffi

Starting from rest conditions means that $x(0) = \dot{x}(0) = 0$. Let's start with x(t), then evaluate x(0) and finally equate this last expression to 0:

$$x(t) = A \sin \omega_n t + B \cos \omega_n t + \Delta_{st} D(\beta) \sin \omega t,$$

 $x(0) = B = 0.$

We do as above for the velocity:

$$\dot{x}(t) = \omega_{\mathsf{n}} \ (A \cos \omega_{\mathsf{n}} t - B \sin \omega_{\mathsf{n}} t) + \Delta_{\mathsf{st}} D(\beta) \omega \cos \omega t,$$
 $\dot{x}(0) = \omega_{\mathsf{n}} A + \omega \Delta_{\mathsf{st}} D(\beta) = 0 \Rightarrow$
 $\Rightarrow A = -\Delta_{\mathsf{st}} \frac{\omega}{\omega_{\mathsf{n}}} D(\beta) = -\Delta_{\mathsf{st}} \beta D(\beta)$

EOM Undamped

The Particular Integral Dynamic Amplification

Response from Rest Resonant Response

oscillator Giacomo Boffi

SDOF linear

EOM Undamped The Particular Integral

Starting from rest conditions means that $x(0) = \dot{x}(0) = 0$. Let's start with x(t), then evaluate x(0) and finally equate this last expression to 0:

$$x(t) = A \sin \omega_n t + B \cos \omega_n t + \Delta_{st} D(\beta) \sin \omega t,$$

 $x(0) = B = 0.$

We do as above for the velocity:

$$\dot{x}(0) = \omega_{\mathsf{n}} \, A + \omega \, \Delta_{\mathsf{st}} \, D(\beta) = 0 \Rightarrow \ A = -\Delta_{\mathsf{st}} \, \frac{\omega}{\omega_{\mathsf{n}}} D(\beta) = -\Delta_{\mathsf{st}} \, \beta D(\beta)$$

Substituting, A and B in x(t) above, collecting Δ_{st} and $D(\beta)$ we have, for $p(t) = p_0 \sin \omega t$, the response from rest:

 $\dot{x}(t) = \omega_{\rm n} (A \cos \omega_{\rm n} t - B \sin \omega_{\rm n} t) + \Delta_{\rm st} D(\beta) \omega \cos \omega t$

$$x(t) = \Delta_{\mathsf{st}} \ D(\beta) \left(\sin \omega t - \beta \sin \omega_{\mathsf{n}} t \right).$$

Dynamic Amplification Response from Rest Resonant Response

Response from Rest Conditions, cont.

SDOF linear oscillator

Giacomo Boffi

ndamped

EOM Undamped
The Particular Integral

Dynamic Amplification
Response from Rest
Response

Is it different when the load is $p(t) = p_0 \cos \omega t$?

You can easily show that, similar to the previous case,

$$x(t) = x(t) = A \sin \omega_{n} t + B \cos \omega_{n} t + \Delta_{st} D(\beta) \cos \omega t$$

and, for a system starting from rest, the initial conditions are

$$x(0) = B + \Delta_{st} D(\beta) = 0$$

$$\dot{x}(0) = A = 0$$

giving A=0, $B=-\Delta_{\rm st}\,D(eta)$ that substituted in the general integral lead to

$$x(t) = \Delta_{st} D(\beta) (\cos \omega t - \cos \omega_n t).$$

Resonant Response from Rest Conditions

SDOF linear oscillator

Giacomo Boffi

ıdamped

EOM Undamped

The Particular Integral Dynamic Amplification

Response from Rest Resonant Response

We have seen that the response to harmonic loading with zero initial conditions is

$$x(t; \beta) = \Delta_{\mathsf{st}} \frac{\sin \omega t - \beta \sin \omega_{\mathsf{n}} t}{1 - \beta^2}$$

and we know that for $\omega=\omega_n$ (i.e., $\beta=1$) the dynamic amplification factor is infinite, but what is really happening when we have the so-called *resonant response*.

Resonant Response from Rest Conditions

SDOF linear oscillator

Giacomo Boffi

tial

EOM Undamped
The Particular Integral
Dynamic Amplification

Response from Rest Resonant Response

We have seen that the response to harmonic loading with zero initial conditions is

$$x(t; \beta) = \Delta_{\mathsf{st}} \frac{\sin \omega t - \beta \sin \omega_{\mathsf{n}} t}{1 - \beta^2}$$

and we know that for $\omega=\omega_n$ (i.e., $\beta=1$) the dynamic amplification factor is infinite, but what is really happening when we have the so-called *resonant response*.

It is true that the denominator $1-\beta^2$ is equal to zero, but also the numerator $\sin \omega t - \beta \sin \omega_n t$ is equal to zero for $\beta=1$, so we are facing an indeterminate expression...

Resonant Response from Rest Conditions

SDOF linear oscillator

Giacomo Boffi

damned

EOM Undamped

The Particular Integral

Response from Rest Resonant Response

We have seen that the response to harmonic loading with zero initial conditions is

$$x(t; \beta) = \Delta_{st} \frac{\sin \omega t - \beta \sin \omega_{n} t}{1 - \beta^{2}}$$

and we know that for $\omega=\omega_n$ (i.e., $\beta=1$) the dynamic amplification factor is infinite, but what is really happening when we have the so-called *resonant response*.

It is true that the denominator $1-\beta^2$ is equal to zero, but also the numerator $\sin \omega t - \beta \sin \omega_n t$ is equal to zero for $\beta=1$, so we are facing an indeterminate expression...

To determine resonant response, we compute the limit for $\beta \to 1$ using the $de\ l'H\hat{o}pital$ rule, i.e., the limit of ratio of type 0/0 for $\beta \longmapsto 1$ is equal to the ratio of the derivatives, with respect to β , of the numerator and the denominator.

Resonant Response from Rest Conditions, cont.

SDOF linear oscillator

Giacomo Boffi

First, we substitute $\beta\omega_n$ for ω , next we compute the two derivatives and finally we substitute ω_n for ω , that can be done because $\beta=1$:

Response

EOM Undamped

The Particular Integral

Dynamic Amplification

Response from Rest Resonant Response

EOM Undamped The Particular Integral Dynamic Amplification Response from Rest

Resonant Response

First, we substitute $\beta\omega_n$ for ω , next we compute the two derivatives and finally we substitute ω_n for ω , that can be done because $\beta = 1$:

$$\begin{split} \lim_{\beta \to 1} x(t;\beta) &= \lim_{\beta \to 1} \Delta_{\rm st} \frac{\partial (\sin \beta \omega_{\rm n} t - \beta \sin \omega_{\rm n} t) / \partial \beta}{\partial (1 - \beta^2) / \partial \beta} \\ &= \frac{\Delta_{\rm st}}{2} \, \left(\sin \omega t - \omega t \cos \omega t \right). \end{split}$$

As you can see, there is a term in quadrature with the loading. whose amplitude grows linearly and without bounds.

SDOF linear oscillator


Giacomo Boffi

ndamped

EOM Undamped

The Particular Integral
Dynamic Amplification
Response from Rest

Resonant Response

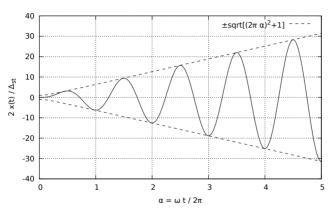

$$\frac{2}{\Delta_{\rm st}}x(t)=\sin\omega t-\omega t\cos\omega t=\sin2\pi\alpha-2\pi\alpha\,\cos2\pi\alpha.$$

note that the amplitude $\mathcal A$ of the *normalized* envelope, with respect to the normalized abscissa $\alpha=\omega t/2\pi$, is $\mathcal A=\sqrt{1+(2\pi\alpha)^2}\stackrel{\text{for large }\alpha}{\Longrightarrow}2\pi\alpha$, as the two components of the response are in *quadrature*.

home work

SDOF linear oscillator

Giacomo Boffi

Undamped Response EOM Undamped

The Particular Integral

Dynamic Amplification

Response from Rest

Resonant Response

Derive the expression for the resonant response with $p(t)=p_0\cos\omega t,\ \omega=\omega_{\rm n}.$

Part II

Response of the Damped Oscillator to Harmonic Loading

SDOF linear oscillator

Giacomo Boffi

Damped Response

Accelerometre, etc

The Equation of Motion for a Damped Oscillator

SDOF linear oscillator

Giacomo Bom

Damped Response

TOWN

EOM Damped

Stationary Response

Phase Angle

Dynamic Magnification

Exponential Load

ccelerometre,

The SDOF equation of motion for a harmonic loading is:

 $m\ddot{x} + c\dot{x} + kx = p_0 \sin \omega t$.

A particular solution to this equation is a harmonic function not in phase with the input: $x(t) = G \sin(\omega t - \theta)$;

The Equation of Motion for a Damped Oscillator

SDOF linear oscillator

Giacomo Boffi

Damped Response

EOM Damped

Particular Integral
Stationary Response
Phase Angle
Dynamic Magnification

Accelerometre

Accelerometre,

The SDOF equation of motion for a harmonic loading is:

$$m\ddot{x} + c\dot{x} + kx = p_0 \sin \omega t$$
.

A particular solution to this equation is a harmonic function not in phase with the input: $x(t) = G \sin(\omega t - \theta)$; it is however equivalent and convenient to write :

$$\xi(t) = G_1 \sin \omega t + G_2 \cos \omega t,$$

where we have simply a different formulation, no more in terms of amplitude and phase but in terms of the amplitudes of two harmonics in quadrature, as in any case the particular integral depends on two free parameters.

The Equation of Motion for a Damped Oscillator

SDOF linear oscillator

Giacomo Boffi

Damped Response

EOM Damped

Particular Integral
Stationary Response
Phase Angle
Dynamic Magnification

Exponential Load

Accelerometre,

The SDOF equation of motion for a harmonic loading is:

$$m\ddot{x} + c\dot{x} + kx = p_0 \sin \omega t$$
.

A particular solution to this equation is a harmonic function not in phase with the input: $x(t) = G \sin(\omega t - \theta)$; it is however equivalent and convenient to write :

$$\xi(t) = \mathbf{G_1} \sin \omega t + \mathbf{G_2} \cos \omega t,$$

where we have simply a different formulation, no more in terms of amplitude and phase but in terms of the amplitudes of two harmonics in quadrature, as in any case the particular integral depends on two free parameters.

SDOF linear oscillator

Giacomo Boffi

EOM Damped Particular Integral

> Stationary Response Phase Angle Dynamic Magnification

Exponential Load

Substituting x(t) with $\xi(t)$, dividing by m it is

$$\ddot{\xi}(t) + 2\zeta\omega_{\mathsf{n}}\dot{\xi}(t) + \omega_{\mathsf{n}}^{2}\xi(t) = \frac{p_{0}}{k}\frac{k}{m}\sin\omega t,$$

Substituting the most general expressions for the particular integral and its time derivatives

 $\xi(t) = G_1 \sin \omega t + G_2 \cos \omega t,$

 $\dot{\varepsilon}(t) = \omega (G_1 \cos \omega t - G_2 \sin \omega t).$

 $\ddot{\xi}(t) = -\omega^2 (G_1 \sin \omega t + G_2 \cos \omega t).$

in the above equation it is

$$-\omega^{2} (G_{1} \sin \omega t + G_{2} \cos \omega t) + 2\zeta \omega_{n} \omega (G_{1} \cos \omega t - G_{2} \sin \omega t) +$$
$$+\omega_{n}^{2} (G_{1} \sin \omega t + G_{2} \cos \omega t) = \Delta_{st} \omega_{n}^{2} \sin \omega t$$

The particular integral, 2

Dividing our last equation by $\omega_{\rm n}^2$ and collecting $\sin\omega t$ and $\cos\omega t$ we obtain

$$\left(G_1(1-eta^2)-G_22eta\zeta
ight)\sin\omega t+ \\ +\left(G_12eta\zeta+G_2(1-eta^2)
ight)\cos\omega t=\Delta_{\sf st}\,\sin\omega t.$$

SDOF linear oscillator

Giacomo Boffi

Damped Response EOM Damped

Particular Integral

Stationary Response Phase Angle Dynamic Magnification

Exponential Load

Accelerometre, etc

The particular integral, 2

Dividing our last equation by ω_n^2 and collecting $\sin \omega t$ and $\cos \omega t$ we obtain

$$\left(G_1(1-eta^2)-G_22eta\zeta
ight)\sin\omega t+$$

$$+\left(G_12\beta\zeta+G_2(1-\beta^2)\right)\cos\omega t=\Delta_{\rm st}\,\sin\omega t.$$

Evaluating the eq. above for $t=\frac{\pi}{2\omega}$ and t=0 we obtain a linear system of two equations in G_1 and G_2 :

$$G_1(1-\beta^2)-G_22\zeta\beta=\Delta_{\mathrm{st}}.$$

$$G_1 2\zeta \beta + G_2 (1 - \beta^2) = 0.$$

SDOF linear oscillator

Giacomo Boffi

Damped Response

EOM Damped

Particular Integral
Stationary Response

Phase Angle Dynamic Magnification

Exponential Load

Accelerometre,

The particular integral, 2

SDOF linear oscillator

Dividing our last equation by ω_n^2 and collecting $\sin \omega t$ and $\cos \omega t$ we obtain

$$\left(\mathit{G}_{1}(1-eta^{2})-\mathit{G}_{2}2eta\zeta
ight)\sin\omega t+$$

$$+\left(G_12\beta\zeta+G_2(1-\beta^2)\right)\cos\omega t=\Delta_{\mathsf{st}}\,\sin\omega t.$$

Evaluating the eq. above for $t=\frac{\pi}{2\omega}$ and t=0 we obtain a linear system of two equations in G_1 and G_2 :

$$G_1(1-eta^2)-G_22\zetaeta=\Delta_{
m st}.$$

$$G_1 2\zeta \beta + G_2 (1 - \beta^2) = 0.$$

The determinant of the linear system is

$$\det = (1 - \beta^2)^2 + (2\zeta\beta)^2,$$

the solution of the linear system is

$$G_1 = + \Delta_{\mathsf{st}} rac{(1-eta^2)}{\mathsf{det}}, \qquad G_2 = - \Delta_{\mathsf{st}} rac{2\zeta eta}{\mathsf{det}}$$

and the particular integral is

$$\xi(t) = rac{\Delta_{
m st}}{{
m det}} \left((1-eta^2) \sin \omega t - 2eta \zeta \cos \omega t
ight).$$

Giacomo Boffi

amped esponse

EOM Damped

Particular Integral
Stationary Response

Phase Angle Dynamic Magnification

Exponential Load

Accelerometre,

SDOF linear oscillator

Giacomo Boffi

Damped Response EOM Damped

Particular Integral
Stationary Response

Phase Angle
Dynamic Magnification

Accelerometre,

Substituting G_1 and G_2 in our expression of the particular integral it is

$$\xi(t) = rac{\Delta_{
m st}}{
m det} \left((1-eta^2) \sin \omega t - 2eta \zeta \cos \omega t
ight).$$

The general integral for $p(t) = p_0 \sin \omega t$ is hence

$$x(t) = \exp(-\zeta \omega_n t) \left(A \sin \omega_D t + B \cos \omega_D t \right) + \Delta_{\rm st} \frac{(1-\beta^2) \sin \omega t - 2\beta \zeta \cos \omega t}{\det}$$

SDOF linear oscillator

Giacomo Boffi

Damped Response EOM Damped

Particular Integral
Stationary Response

Phase Angle

Dynamic Magnification

Exponential Load

Accelerometre,

Substituting G_1 and G_2 in our expression of the particular integral it is

$$\xi(t) = \frac{\Delta_{\rm st}}{\det} \left((1 - \beta^2) \sin \omega t - 2\beta \zeta \cos \omega t \right).$$

The general integral for $p(t) = p_0 \sin \omega t$ is hence

$$x(t) = \exp(-\zeta \omega_n t) (A \sin \omega_D t + B \cos \omega_D t) + \Delta_{st} \frac{(1-\beta^2) \sin \omega t - 2\beta \zeta \cos \omega t}{\det}$$

For standard initial conditions, $A = \frac{\dot{x}_0 + \omega_n \zeta \times (x_0 - G_2) - G_1 \omega}{\omega + d}, B = x_0 - G_2$.

SDOF linear oscillator

Giacomo Boffi

EOM Damped Particular Integral

Stationary Response Phase Angle Dynamic Magnification

Exponential Load

For a generic harmonic load

$$p(t) = p_{\sin} \sin \omega t + p_{\cos} \cos \omega t,$$

with $\Delta_{\sin} = p_{\sin}/k$ and $\Delta_{\cos} = p_{\cos}/k$ the integral of the motion is

$$egin{aligned} x(t) &= \exp(-\zeta \omega_{ extsf{n}} t) \left(A \sin\!\omega_{ extsf{D}} t + B \, \cos\omega_{ extsf{D}} t
ight) + \\ &+ \Delta_{ extsf{sin}} rac{\left(1 - eta^2
ight) \sin\omega t - 2eta\zeta \cos\omega t}{\det} + \\ &+ \Delta_{ extsf{cos}} rac{\left(1 - eta^2
ight) \cos\omega t + 2eta\zeta \sin\omega t}{\det}. \end{aligned}$$

$$\begin{split} x(t) &= \exp(-\zeta \omega_{\text{n}} t) \left(A \sin \omega_{\text{D}} t + B \cos \omega_{\text{D}} t \right) + \\ &+ \Delta_{\text{st}} \frac{(1 - \beta^2) \sin \omega t - 2\beta \zeta \cos \omega t}{\det} \end{split}$$

shows that we have a *transient response*, that depends on the initial conditions and damps out for large values of the argument of the real exponential, and a so called *steady-state response*, corresponding to the particular integral, $x_{s-s}(t) \equiv \xi(t)$, that remains constant in amplitude and phase as long as the external loading is being applied.

amped

sponse

EOM Damped
Particular Integral

Stationary Response

Phase Angle
Dynamic Magnification
Exponential Load

Accelerometre, etc

$$\begin{split} x(t) &= \exp(-\zeta \omega_{\text{n}} t) \left(A \sin \omega_{\text{D}} t + B \, \cos \omega_{\text{D}} t \right) + \\ &+ \Delta_{\text{st}} \frac{\left(1 - \beta^2 \right) \sin \omega t - 2\beta \zeta \cos \omega t}{\det} \end{split}$$

shows that we have a *transient response*, that depends on the initial conditions and damps out for large values of the argument of the real exponential, and a so called *steady-state response*, corresponding to the particular integral, $x_{s-s}(t) \equiv \xi(t)$, that remains constant in amplitude and phase as long as the external loading is being applied.

amped

EOM Damped

Particular Integral

Phase Angle

Dynamic Magnification

Exponential Load

Accelerometre,

Examination of the general integral

$$\begin{split} x(t) &= \exp(-\zeta \omega_{\mathsf{n}} t) \left(A \sin\!\omega_{\mathsf{D}} t + B \, \cos\omega_{\mathsf{D}} t \right) + \\ &+ \Delta_{\mathsf{st}} \frac{(1-\beta^2) \sin\omega t - 2\beta\zeta \cos\omega t}{\det} \end{split}$$

shows that we have a *transient response*, that depends on the initial conditions and damps out for large values of the argument of the real exponential, and a so called *steady-state response*, corresponding to the particular integral, $x_{s-s}(t) \equiv \xi(t)$, that remains constant in amplitude and phase as long as the external loading is being applied. From an engineering point of view, we have a specific interest in the steady-state response, as it is the long term component of the response.

amped esponse

EOM Damped

Stationary Response

Phase Angle
Dynamic Magnification
Exponential Load

Accelerometre, etc

Phase Angle

Dynamic Magnification

Exponential Load

Accelerometre,

Giacomo Bon


factor, it is convenient to reintroduce the amplitude and the phase difference θ and write:

$$\xi(t) = \Delta_{st} R(t; \beta, \zeta), \quad R = D(\beta, \zeta) \sin(\omega t - \theta).$$

To write the stationary response in terms of a dynamic amplification

Let's start analyzing the phase difference $\theta(\beta,\zeta)$. Its expression is:

$$\theta(eta,\zeta) = \arctan rac{2\zetaeta}{1-eta^2}.$$

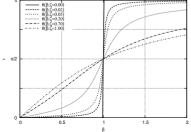

 $\theta(\beta,\zeta)$ has a sharper variation around $\beta=1$ for decreasing values of ζ , but it is apparent that, in the case of slightly damped structures, the response is approximately in phase for low frequencies of excitation, and in opposition for high frequencies. It is worth mentioning that for $\beta=1$ we have that the response is in perfect quadrature with the load: this is very important to detect resonant response in dynamic tests of structures

Particular Integral
Stationary Response


Phase Angle


Dynamic Magnification

Exponential Load

Accelerometre, etc

The dynamic magnification factor, $D=D(\beta,\zeta)$, is the amplitude of the stationary response normalized with respect to $\Delta_{\rm st}$:

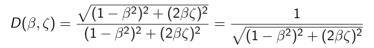

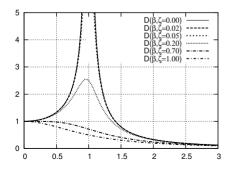

- D(β, ζ) has larger peak values for decreasing values of ζ,
- the approximate value of the peak, very good for a slightly damped structure, is 1/2ζ,
- for larger damping, peaks move toward the origin, until for $\zeta = \frac{1}{\sqrt{2}}$ the peak is in the origin,
- for dampings $\zeta > \frac{1}{\sqrt{2}}$ we have no peaks.

Dynamic Magnification Ratio (2)

SDOF linear oscillator

Giacomo Boffi

amped esponse

EOM Damped
Particular Integral
Stationary Response

Phase Angle

Dynamic Magnification

Exponential Load

Accelerometre,

The location of the response peak is given by the equation

$$\frac{d D(\beta, \zeta)}{d \beta} = 0, \quad \Rightarrow \quad \beta^3 + (2\zeta^2 - 1)\beta = 0$$

the 3 roots are

$$\beta_i = 0, \pm \sqrt{1 - 2\zeta^2}.$$

We are interested in a real, positive root, so we are restricted to $0<\zeta\leq \frac{1}{\sqrt{2}}.$ In this interval, substituting $\beta=\sqrt{1-2\zeta^2}$ in the expression of the response ratio, we have

$$D_{\mathsf{max}} = rac{1}{2\zeta} rac{1}{\sqrt{1-\zeta^2}}.$$

For $\zeta = \frac{1}{\sqrt{2}}$ there is a maximum corresponding to $\beta = 0$.

Note that, for a relatively large damping ratio, $\zeta = 20\%$, the error of $1/2\zeta$ with respect to D_{max} is in the order of 2%.

SDOF linear oscillator

Giacomo Boffi

Consider the EOM for a load modulated by an exponential of imaginary argument:

$$\ddot{x} + 2\zeta\omega_{\mathsf{n}}\dot{x} + \omega_{\mathsf{n}}^2x = \Delta_{\mathsf{st}}\omega_{\mathsf{n}}^2\exp(i(\omega t - \phi)).$$

Damped

EOM Damped

Particular Integral Stationary Response

Phase Angle Dynamic Magnification

Exponential Load

etc

SDOF linear oscillator

Giacomo Boffi

Consider the EOM for a load modulated by an exponential of imaginary argument:

$$\ddot{x} + 2\zeta\omega_{\mathsf{n}}\dot{x} + \omega_{\mathsf{n}}^2x = \Delta_{\mathsf{st}}\omega_{\mathsf{n}}^2\exp(i(\omega t - \phi)).$$

The particular solution and its derivatives are

$$\begin{split} \xi &= G \exp(i\omega t - i\phi), \\ \dot{\xi} &= i\omega G \exp(i\omega t - i\phi), \\ \ddot{\xi} &= -\omega^2 G \exp(i\omega t - i\phi), \end{split}$$

where G is a complex constant.

amped esponse

EOM Damped

Stationary Response Phase Angle

Dynamic Magnification Exponential Load

Accelerometre, etc

Substituting, dividing by ω_n^2 , removing the dependency on $\exp(i\omega t)$ and solving for G yields

$$G = \Delta_{\mathsf{st}} \left[\frac{1}{(1 - \beta^2) + i(2\zeta\beta)} \right] = \Delta_{\mathsf{st}} \left[\frac{(1 - \beta^2) - i(2\zeta\beta)}{(1 - \beta^2)^2 + (2\zeta\beta)^2} \right].$$

We can write

$$x_{\mathsf{s-s}} = \Delta_{\mathsf{st}} D(\beta, \zeta) \exp i\omega t$$

with

$$D(\beta,\zeta) = \frac{1}{(1-\beta^2) + i(2\zeta\beta)}$$

SDOF linear oscillator

Giacomo Boffi

Damped

EOM Damped
Particular Integral

Stationary Response Phase Angle

Dynamic Magnification

Exponential Load

Accelerometre, etc

SDOF linear oscillator

Giacomo Boffi

amned

EOM Damped

Particular Integral
Stationary Response
Phase Angle

Dynamic Magnification

Exponential Load

Accelerometre,

Substituting, dividing by ω_n^2 , removing the dependency on $\exp(i\omega t)$ and solving for G yields

$$G = \Delta_{\mathsf{st}} \left[\frac{1}{(1-\beta^2) + i(2\zeta\beta)} \right] = \Delta_{\mathsf{st}} \left[\frac{(1-\beta^2) - i(2\zeta\beta)}{(1-\beta^2)^2 + (2\zeta\beta)^2} \right].$$

We can write

$$x_{ extsf{s-s}} = \Delta_{ extsf{st}} D(eta, \zeta) \exp i\omega t$$

with

$$D(\beta,\zeta) = \frac{1}{(1-\beta^2) + i(2\zeta\beta)}$$

It is simpler to represent the stationary response of a damped oscillator using the complex exponential representation.

Measuring Support Accelerations

SDOF linear oscillator

Giacomo Boffi

lesponse

Accelerometre,

The Accelerometre
Measuring
Displacements

We have seen that in seismic analysis the loading is proportional to the ground acceleration.

A simple oscillator, when properly damped, may serve the scope of measuring support accelerations.

Measuring Support Accelerations, 2

SDOF linear oscillator

Giacomo Boffi

lesponse

Accelerometre,

The Accelerometre

Measuring Displacements

With the equation of motion valid for a harmonic support acceleration:

$$\ddot{x} + 2\zeta\beta\omega_{\rm n}\dot{x} + \omega_{\rm n}^2x = -a_{\rm g}\sin\omega t,$$

the stationary response is $\xi = \frac{m a_g}{k} D(\beta, \zeta) \sin(\omega t - \theta)$. If the damping ratio of the oscillator is $\zeta \approx 0.7$, then the property Dynamic Amplification $D(\beta) \approx 1$ for $0.0 < \beta < 0.6$.

Measuring Support Accelerations, 2

SDOF linear oscillator

Giacomo Boffi

amped esponse

Accelerometre,

The Accelerometre

Measuring Displacements

With the equation of motion valid for a harmonic support acceleration:

$$\ddot{x} + 2\zeta\beta\omega_{\rm n}\dot{x} + \omega_{\rm n}^2x = -a_{\rm g}\sin\omega t,$$

the stationary response is $\xi = \frac{m \, a_g}{k} \, D(\beta, \zeta) \, \sin(\omega t - \theta)$. If the damping ratio of the oscillator is $\zeta \cong 0.7$, then the Dynamic Amplification $D(\beta) \cong 1$ for $0.0 < \beta < 0.6$.

Oscillator's displacements will be proportional to the accelerations of the support for applied frequencies up to about six-tenths of the natural frequency of the instrument.

With the equation of motion valid for a harmonic support acceleration:

$$\ddot{x} + 2\zeta\beta\omega_{\mathsf{n}}\dot{x} + \omega_{\mathsf{n}}^2x = -a_{\mathsf{g}}\sin\omega t,$$

the stationary response is $\xi = \frac{m \, a_g}{k} \, D(\beta, \zeta) \, \sin(\omega t - \theta)$. If the damping ratio of the oscillator is $\zeta \approxeq 0.7$, then the Dynamic Amplification $D(\beta) \approxeq 1$ for $0.0 < \beta < 0.6$.

Oscillator's displacements will be proportional to the accelerations of the support for applied frequencies up to about six-tenths of the natural frequency of the instrument.

As it is possible to record the oscillator displacements by means of electro-mechanical or electronic devices, it is hence possible to measure, within an almost constant scale factor, the ground accelerations component up to a frequency of the order of 60% of the natural frequency of the oscillator.

With the equation of motion valid for a harmonic support acceleration:

$$\ddot{x} + 2\zeta\beta\omega_{\rm n}\dot{x} + \omega_{\rm n}^2x = -a_{\rm g}\sin\omega t,$$

the stationary response is $\xi = \frac{m \, a_g}{k} \, D(\beta, \zeta) \, \sin(\omega t - \theta)$. If the damping ratio of the oscillator is $\zeta \approxeq 0.7$, then the Dynamic Amplification $D(\beta) \approxeq 1$ for $0.0 < \beta < 0.6$.

Oscillator's displacements will be proportional to the accelerations of the support for applied frequencies up to about six-tenths of the natural frequency of the instrument.

As it is possible to record the oscillator displacements by means of electro-mechanical or electronic devices, it is hence possible to measure, within an almost constant scale factor, the ground accelerations component up to a frequency of the order of 60% of the natural frequency of the oscillator.

This is not the whole story, entire books have been written on the problem of exactly recovering the support acceleration from an accelerographic record.

Measuring Displacements

Consider now a harmonic displacement of the support, $u_g(t) = u_g \sin \omega t$. The support acceleration (disregarding the sign) is $a_g(t) = \omega^2 u_g \sin \omega t$.

With the equation of motion: $\ddot{x}+2\zeta\beta\omega_{\rm n}\dot{x}+\omega_{\rm n}^2x=-\omega^2u_{\rm g}\sin\omega t$, the stationary response is $\xi=u_{\rm g}\,\beta^2\,D(\beta,\zeta)\,\sin(\omega t-\theta)$.

Let's see a graph of the dynamic amplification factor derived above.

SDOF linear oscillator

Giacomo Boffi

esponse

Accelerometre, etc


The Accelerometre

Measuring Displacements Consider now a harmonic displacement of the support, $u_g(t) = u_g \sin \omega t$. The support acceleration (disregarding the sign) is $a_g(t) = \omega^2 u_g \sin \omega t$.

With the equation of motion: $\ddot{x}+2\zeta\beta\omega_{\rm n}\dot{x}+\omega_{\rm n}^2x=-\omega^2u_{\rm g}\sin\omega t$, the stationary response is $\xi=u_{\rm g}\,\beta^2\,D(\beta,\zeta)\,\sin(\omega t-\theta)$.

Let's see a graph of the dynamic amplification factor derived above.

We see that the displacement of the instrument is approximately equal to the support displacement for all the excitation frequencies greater than the natural frequency of the instrument, for a damping ratio $\zeta \cong .5$.

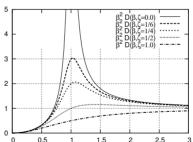


Consider now a harmonic displacement of the support, $u_g(t) = u_g \sin \omega t$. The support acceleration (disregarding the sign) is $a_g(t) = \omega^2 u_g \sin \omega t$.

With the equation of motion: $\ddot{x} + 2\zeta\beta\omega_{\rm n}\dot{x} + \omega_{\rm n}^2x = -\omega^2u_{\rm g}\sin\omega t$, the stationary response is $\xi = u_{\rm g}\,\beta^2\,D(\beta,\zeta)\,\sin(\omega t - \theta)$.

Let's see a graph of the dynamic amplification factor derived above.

We see that the displacement of the instrument is approximately equal to the support displacement for all the excitation frequencies greater than the natural frequency of the instrument, for a damping ratio $\zeta \cong .5$.

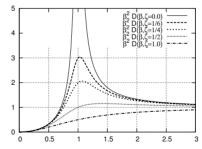

It is possible to measure the support displacement measuring the deflection of the oscillator, within an almost constant scale factor, for excitation frequencies larger than ω_n .

SDOF linear oscillator

Giacomo Boffi

Vibration Isolation

Part III

Vibration Isolation

Vibration Isolation

SDOF linear oscillator

Giacomo Boffi

ibration

Introduction

Force Isolation

Displacement Isolation

Isolation Effectiveness

Vibration isolation is a subject too broad to be treated in detail, we'll present the basic principles involved in two problems,

- 1. prevention of harmful vibrations in supporting structures due to oscillatory forces produced by operating equipment,
- 2. prevention of harmful vibrations in sensitive instruments due to vibrations of their supporting structures.

Introduction Earen Indiation

Displacement Isolation Isolation Effectiveness

Consider a rotating machine that produces an oscillatory force $p_0 \sin \omega t$ due to unbalance in its rotating part, that has a total mass m and is mounted on a spring-damper support. Its steady-state relative displacement is given by

$$x_{\text{s-s}} = \frac{p_0}{k} D \sin(\omega t - \theta).$$

This result depend on the assumption that the supporting structure deflections are negligible respect to the relative system motion.

The steady-state spring and damper forces are

$$f_{S} = k x_{ss} = p_{0} D \sin(\omega t - \theta),$$


$$f_{D} = c \dot{x}_{ss} = \frac{cp_{0} D \omega}{k} \cos(\omega t - \theta) = 2 \zeta \beta p_{0} D \cos(\omega t - \theta).$$

The spring and damper forces are in quadrature, so the amplitude of the steady-state reaction force is given by

$$f_{\mathsf{max}} = p_0 \, D \, \sqrt{1 + (2\zeta\beta)^2}$$

The ratio of the maximum transmitted force to the amplitude of the applied force is the transmissibility ratio (TR).

$$\mathsf{TR} = \frac{f_{\mathsf{max}}}{p_0} = D\,\sqrt{1 + (2\zeta\beta)^2}.$$

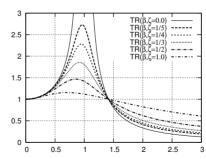

- 1. For $\beta < \sqrt{2}$, TR ≥ 1 , the transmitted force is not reduced.
- 2. For $\beta > \sqrt{2}$. TR < 1. note that for the same β TR is larger for larger values of ζ .

Dual to force transmission there is the problem of the steady-state total

displacements of a mass m, supported by a suspension system (i.e., spring+damper) and subjected to a harmonic motion of its base.

Let's write the base motion using the exponential notation, $u_g(t) = u_{go} \exp i\omega t$. The apparent force is $p_{\text{eff}} = m\omega^2 u_{go} \exp i\omega t$ and the steady state relative displacement is $x_{\text{ss}} = u_{go} \beta^2 D \exp i\omega t$.

The mass total displacement is given by

$$\begin{aligned} x_{\mathsf{tot}} &= x_{\mathsf{s-s}} + u_{\mathsf{g}}(t) = u_{\mathsf{go}} \left(\frac{\beta^2}{(1 - \beta^2) + 2 \, i \, \zeta \beta} + 1 \right) \, \exp i \omega t \\ &= u_{\mathsf{go}} \left(1 + 2 i \zeta \beta \right) \frac{1}{(1 - \beta^2) + 2 \, i \, \zeta \beta} \, \exp i \omega t \\ &= u_{\mathsf{go}} \, \sqrt{1 + (2 \zeta \beta)^2} \, D \, \exp i \left(\omega t - \varphi \right). \end{aligned}$$

If we define the transmissibility ratio TR as the ratio of the maximum total response to the support displacement amplitude, we find that, as in the previous case,

$$\mathsf{TR} = D\,\sqrt{1 + (2\zeta\beta)^2}.$$

Isolation Effectiveness

SDOF linear oscillator

Giacomo Boffi

Introduction

Displacement Isolation Isolation Effectiveness

Define the isolation effectiveness.

$$IE = 1 - TR$$
,

IE=1 means complete isolation, i.e., $\beta = \infty$, while IE=0 is no isolation, and takes place for $\beta = \sqrt{2}$.

As effective isolation requires low damping, we can approximate TR $\approx 1/(\beta^2 - 1)$, in which case we have IE = $(\beta^2 - 2)/(\beta^2 - 1)$. Solving for β^2 , we have $\beta^2 = (2 - IE)/(1 - IE)$, but

$$\beta^2 = \omega^2/\omega_{\rm n}^2 = \omega^2 \left(m/k \right) = \omega^2 \left(W/gk \right) = \omega^2 \left(\Delta_{\rm st}/g \right)$$

where W is the weight of the mass and Δ_{st} is the static deflection under self weight. Finally, from $\omega = 2\pi f$ we have

$$f = rac{1}{2\pi} \sqrt{rac{g}{\Delta_{
m st}} rac{2 - {
m IE}}{1 - {
m IE}}}$$

Introduction


Displacement Isolation

Isolation Effectiveness

The strange looking

$$f = rac{1}{2\pi} \sqrt{rac{\mathsf{g}}{\Delta_{\mathsf{st}}}} rac{2 - \mathsf{IE}}{1 - \mathsf{IE}}$$

 $2\pi\sqrt{\frac{2-|E|}{\Delta_{st}}}\frac{2-|E|}{1-|E|}$ can be plotted f vs Δ_{st} for different values of IE, obtaining a decision art.

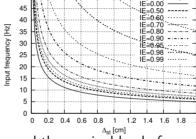

Knowing the frequency of excitation and the required level of vibration isolation efficiency (IE), one can determine the minimum static deflection (proportional to the spring flexibility) required to achieve the required IE. It is apparent that any isolation system must be very flexible to be effective.

SDOF linear oscillator

Giacomo Boffi

Evaluation of damping

Part IV

Evaluation of Viscous Damping Ratio

Evaluation of damping

SDOF linear oscillator

Giacomo Boffi

Evaluation of

Introduction

Free vibration decay Resonant amplification Half Power

Resonance Energy Loss

The mass and stiffness of phisycal systems of interest are usually evaluated easily, but this is not feasible for damping, as the energy is dissipated by different mechanisms, some one not fully understood... it is even possible that dissipation cannot be described in term of viscous-damping, But it generally is possible to measure an equivalent viscous-damping ratio by experimental methods:

Evaluation of damping

SDOF linear oscillator

Giacomo Boffi

Evaluation of damping

Introduction

Free vibration decay Resonant amplification Half Power

Resonance Energy Loss

The mass and stiffness of phisycal systems of interest are usually evaluated easily, but this is not feasible for damping, as the energy is dissipated by different mechanisms, some one not fully understood... it is even possible that dissipation cannot be described in term of viscous-damping, But it generally is possible to measure an equivalent viscous-damping ratio by experimental methods:

- ► free-vibration decay method,
- resonant amplification method,
- half-power (bandwidth) method,
- resonance cyclic energy loss method.

We already have discussed the free-vibration decay method.

$$\zeta = rac{\delta_s}{2\pi \, s \, (\omega_n/\omega_D)} = rac{\delta_s}{2s\pi} \, \sqrt{1-\zeta^2}$$

with $\delta_s = \ln \frac{x_r}{x_{r+s}}$, logarithmic decrement. The method is simple and its requirements are minimal, but some care must be taken in the interpretation of free-vibration tests, because the damping ratio decreases with decreasing amplitudes of the response, meaning that for a very small amplitude of the motion the effective values of the damping can be underestimated.

Resonant amplification

(good for small ζ) $D_{\max} = \frac{1}{2\zeta}$ to write

SDOF linear oscillator Giacomo Boffi

Introduction

Resonant amplification Half Power

Free vibration decay

Resonance Energy Loss

This method assumes that it is possible to measure the stiffness of the structure, and that damping is small. The experimenter (a) measures the steady-state response x_{ss} of a SDOF system under a harmonic loading for a number of different excitation frequencies (eventually using a smaller frequency step when close to the resonance), (b) finds the maximum value $D_{\text{max}} = \frac{\max\{x_{\text{ss}}\}}{\Lambda}$ of the

$$D_{\mathsf{max}} = \frac{1}{2\zeta} = \frac{\mathsf{max}\{x_{\mathsf{ss}}\}}{\Delta_{\mathsf{ct}}}$$

dynamic magnification factor, (c) uses the approximate expression

and finally (d) has

$$\zeta = \frac{\Delta_{\rm st}}{2\max\{x_{\rm ss}\}}$$
 .

The most problematic aspect here is getting a good estimate of Δ_{st} , if the results of a static test aren't available.

Half Power

Resonance Energy Loss

The adimensional frequencies where the response is $1/\sqrt{2}$ times the peak value can be computed from the equation

$$\frac{1}{\sqrt{(1-\beta^2)^2 + (2\beta\zeta)^2}} = \frac{1}{\sqrt{2}} \frac{1}{2\zeta\sqrt{1-\zeta^2}}$$

squaring both sides and solving for β^2 gives

$$\beta_{1,2}^2 = 1 - 2\zeta^2 \mp 2\zeta\sqrt{1 - \zeta^2}$$

For small ζ we can use the binomial approximation and write

$$\beta_{1,2} = \left(1 - 2\zeta^2 \mp 2\zeta\sqrt{1 - \zeta^2}\right)^{\frac{1}{2}} \approx 1 - \zeta^2 \mp \zeta\sqrt{1 - \zeta^2}$$

Half power (2)

SDOF linear oscillator

Giacomo Boffi

Introduction Free vibration decay Resonant amplification

Half Power

Resonance Energy Loss

From the approximate expressions for the difference of the half power frequency ratios.

$$\beta_2 - \beta_1 = 2\zeta\sqrt{1-\zeta^2} \approxeq 2\zeta$$

and their sum

$$\beta_2 + \beta_1 = 2(1 - \zeta^2) \approxeq 2$$

we can deduce that

$$\frac{\beta_2 - \beta_1}{\beta_2 + \beta_1} = \frac{f_2 - f_1}{f_2 + f_1} \approx \frac{2\zeta\sqrt{1 - \zeta^2}}{2(1 - \zeta^2)} \approx \zeta, \text{ or } \zeta \approx \frac{f_2 - f_1}{f_2 + f_1}$$

where f_1 , f_2 are the frequencies at which the steady state amplitudes equal $1/\sqrt{2}$ times the peak value, frequencies that can be determined from a dynamic test where detailed test data is available.

damping
Introduction
Free vibration decay
Resonant amplification

Resonance Energy Loss

Half Power

If it is possible to determine the phase of the s-s response, it is possible to measure ζ from the amplitude ρ of the resonant response. At resonance, the deflections and accelerations are in quadrature with the excitation, so that the external force is equilibrated *only* by the viscous force, as both elastic and inertial forces are also in quadrature with the excitation.

The equation of dynamic equilibrium is hence:

$$p_0 = c \,\dot{x} = 2\zeta \omega_{\mathsf{n}} m \,(\omega_{\mathsf{n}} \rho).$$

Solving for ζ we obtain:

$$\zeta = \frac{p_0}{2m\omega_n^2\rho}.$$